



NEW COMBINATION GRAVITY LOCK - KEY HOUSING



HOW TO SET THE LOCK?

1. Set standard code "0-0" immediately to personal code
2. Note your personal code
3. To open the lock set personal code or use the key
4. After closing turn the wheels to close completely

To open set code "0-0" or personal code
Turn knob to the left

To set new code set "0-0" or personal code.
Hold knob in position on the left.
Set new code.
Let go of the knob.